








 









 

























 




| Original | | Replacement | | Original | | Replacement | |
|---|----------------|---|------------------------|---|------------------|---|-----------------------------|
|  | Auto Memory |  | Green / APP / Repeat |  | 9 |  | 9 |
|  | Memory |  | Red / Netflix / Search |  | Sound |  | Sound / Title |
|  | Power Receiver |  | Power |  | +10 |  | Guide / EPG / -/- |
|  | PTY |  | Info / Angle |  | 0 |  | 0 |
|  | Display |  | Display / Media |  | HDMI Setup |  | Menu / Home |
|  | Virtual |  | Smart / List |  | Setup |  | Setup / OPT / |
|  | Active EQ |  | Subtitle / EQ |  | Listen Mode |  | Blue / Prime Video / Random |
|  | 1 |  | 1 |  | Pure Audio |  | Yellow / YouTube / Repeat |
|  | 2 |  | 2 |  | Multi Control |  | CH- / Page- |
|  | 3 |  | 3 |  | Multi Control Up |  | CH+ / Page+ |
|  | Bass Boost |  | Eject / Surround |  | Volume+ |  | Vol+ |
|  | 4 |  | 4 |  | Volume- |  | Vol- |
|  | 5 |  | 5 |  | Band |  | TV/Radio / |
|  | 6 |  | 6 |  | Auto/Mono |  | Audio / Lang I/II |
|  | Tone |  | Text / Goto |  | Mute |  | Mute / Dimmer |
|  | 7 |  | 7 |  | P.Call- |  | I<< / Preset- |
|  | 8 |  | 8 |  | P.Call+ |  | >>I / Preset+ |





| Original | Replacement |
|-----------|--------------------|
| Power DVD | Power |
| Audio | Audio / Lang I/II |
| Subtitle | Subtitle / EQ |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| +10 | Guide / EPG / -/-- |
| 0 | 0 |
| Top Menu | D.Menu / Top |
| Menu | Menu / Home |
| Up | Up |

| Original | Replacement |
|------------|-----------------------|
| Left | Left |
| Enter | OK |
| Right | Right |
| Down | Down |
| On Screen | Display / Media |
| Return | Back / Return |
| Pause | Pause / Step / Freeze |
| Play/Pause | Play / Slow |
| Stop | Stop / Hold |
| I<< | I<< / Preset- |
| >>I | >>I / Preset+ |
| << | << / Tune- |
| >> | >> / Tune+ |

