



















Original	Replacement	Original	Replacement
Power		Power	EQ SUBTITLE
OK		Subtitle	Subtitle / EQ
Up		Settings	Setup / OPT /
Down		>>	PRESET+ >>I / Preset+
Right		>>	TUNE+ >> / Tune+
Left		Play	SLOW Play / Slow
Back		AD / PIP	TITLE SOUND
Vol +		<<	PRESET- I<< / Preset-
Vol -		<<	TUNE- << / Tune-
Home / Smart		Rec	REC MODE Rec / Rec Mode
3D	 +  Shift + 3	Pause	STEP - FREEZE Pause / Step / Freeze
Mute		Text	GOTO TEXT Text / Goto
P +		FAV	PC FAV MARKER Fav / Marker / PC
P -		Exit	CLEAR EXIT Exit / Cancel / Clear
Ratio		Input	RDS AV INPUT AV / Input / RDS
List		Blue	Prime Video RANDOM Blue / Prime Video / Random
Q.Menu		Yellow	YouTube REPEAT A-B Yellow / YouTube / Repeat
		Stop / Live TV	HOLD Stop / Hold

Menu



Original	Replacement	Original	Replacement
AV Mode	+ Shift + AV / Input / RDS	5	5
Green	Green / APP / Repeat	Q.View	+ Shift + Display / Media
Red	Red / Netflix / Search	4	4
0	0	Live Zoom	Zoom / Size
AD	Audio / Lang I/II	3	3
TV / PC	+ Shift + Fav / Marker / PC	2	2
Search	+ Shift + Red / Netflix /	1	1
App	+ Shift + Green / APP /	T.Opt	+ Shift + Setup / OPT / Tools
TV / Radio	TV/Radio /	Energy Saving	Eject / Surround
Guide	Guide / EPG / -/--	My APPS	+ Shift + Smart / List
Info	Info / Angle		
Recent	Sleep / Timer		
9	9		
8	8		
7	7		
Live Menu	Display / Media		
6	6		

