







































Original	Replacement
 Power	 Power
 Tv Power	 Shift + Power
 Open/Close	 Eject / Surround
 Tv Mute	 Shift + Mute / Dimmer
 AV/Input Tv	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 PR/CH+ Tv	 Shift + CH+ /
 4	 4
 5	 5
 6	 6
 PR/CH- Tv	 Shift + CH- /
 7	 7
 8	 8
 9	 9
 Vol+ Tv	 Vol+

Original	Replacement
 Clear	 Shift + Exit / Cancel / Clear
 0	 0
 Recall/Repeat/Tv/ Radio	 TV/Radio /
 Vol- Tv	 Vol-
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Pause/Time Shift	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 Home	 Menu / Home
 Up	 Up
 Info/Menu	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right





Original	Replacement
 Back	 Back / Return
 Down	 Down
 Disc Menu/Rec	 D.Menu / Top
 Guide	 Guide / EPG / -/--
 PR-	 CH- / Page-
 PR+	 CH+ / Page+
 PR List	 Smart / List
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Exit	 Exit / Cancel / Clear
 Subtitle	 Subtitle / EQ
 Text	 Text / Goto
 Mute	 Mute / Dimmer
 Rec	 Rec / Rec Mode
 Timer Rec	 Shift + Rec / Rec Mode

Original	Replacement
 Title/Popup	 Setup / OPT /

