

















 


























 











Original	Replacement
 Power	 Power
 Tv/Radio	 TV/Radio /
 Search	 Display / Media
 Subtitle	 Subtitle / EQ
 *	 D.Menu / Top
 Input	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 List	 Smart / List
 0	 0

Original	Replacement
 ...	 Fav / Marker / PC
 Vol+	 Vol+
 AD	 Audio / Lang I/II
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Guide	 Guide / EPG / -/-
 CH-	 CH- / Page-
 Mute	 Mute / Dimmer
 Netflix	 Shift + Red / Netflix /
 Home	 Menu / Home
 Prime Video	 Shift + Blue / Prime
 Back	 Back / Return
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 OK	 OK
 Right	 Right





Original	Replacement	Original	Replacement
Text	Text / Goto		
Down	Down		
T.Opt	Setup / OPT /		
Movies	Picture / Format		
Rec	Rec / Rec Mode		
Stop	Stop / Hold		
<<	<< / Tune-		
Play	Play / Slow		
Pause	Pause / Step / Freeze		
>>	>> / Tune+		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		

Original	Replacement	Original	Replacement

