



Original		Replacement		Original		Replacement	
	Power		Power		.../*		Display / Media
	Tv/Rad		TV/Radio /		Vol+		Vol+
	Search/*		Shift + Red / Netflix /		FAV//Quic Acces/*		Fav / Marker / PC
	Subtitle		Subtitle / EQ		CH+		CH+ / Page+
	*		Setup / OPT /		Vol-		Vol-
	Source		AV / Input / RDS		Guide		Guide / EPG / -/-
	1		1		CH-		CH- / Page-
	2		2		Mute		Mute / Dimmer
	3		3		Text		Text / Goto
	4		4		Home		Menu / Home
	5		5		T.Opt.		Shift + Setup / OPT / Tools
	6		6		Back		Back / Return
	7		7		Up		Up
	8		8		Exit		Exit / Cancel / Clear
	9		9		Left		Left
	List		Smart / List		OK		OK
	0		0		Right		Right





	Original	Replacement	Original	Replacement
	AD/*	Audio / Lang I/II		
	Down	Down		
	Q.Menu/*	D.Menu / Top		
	Movies	Picture / Format		
	Rec/*	Rec / Rec Mode		
	Stop	Stop / Hold		
	<<	<< / Tune-		
	Play	Play / Slow		
	Pause	Pause / Step / Freeze		
	>>	>> / Tune+		
	Red	Red / Netflix / Search		
	Green	Green / APP / Repeat		
	Yellow	Yellow / YouTube / Repeat		
	Blue	Blue / Prime Video / Random		

