









































 





























Original	Replacement
	 Power
	 AV / Input / RDS
	 Text / Goto
	 Setup / OPT /
	 Audio / Lang I/II
	 Menu / Home
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Smart / List
	 0

Original	Replacement
	 Fav / Marker / PC
	 Vol+
	 Mute / Dimmer
	 CH+ / Page+
	 Vol-
	 Display / Media
	 CH- / Page-
	 TV/Radio /
	 Shift + Red / Netflix /
	 Shift + Menu /
	 Shift + Blue / Prime
	 Shift + Yellow / YouTube /
	 Up
	 Shift + Green / APP /
	 Left
	 OK
	 Right





Original	Replacement	Original	Replacement
	Back		Back / Return
	Down		Down
	[→]		Exit / Cancel / Clear
	Guide		Guide / EPG / -/--
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	<<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Original	Replacement	Original	Replacement

