 


 
 


 
 
 

 
 



 
 



 

 









 









 

 

 

 

 



 
 


 

 



 












 


 
 
 
 


 




 
 









Original		Replacement		Original		Replacement	
	Standby		Power		Mute		MUTE
	USB		SRC		Menu		MENU
	1		1		Setup		VOD
	2		2		Up		UP
	3		3		Down		DOWN
	4		4		Left		LEFT
	5		5		Right		RIGHT
	6		6		Enter		OK
	7		7		Title		TV/R
	8		8		L/R		Green (B)
	9		9		<<		Rewind
	0/10		0		>>		Fast Forward
	10+		-/-- / EPG		Play		Play
	Time		P/C / FAV		Pause		Pause
	SUB/MP3		MEDIA		PBC		Yellow (C)
	Angle		Red (A)		Stop		Stop
	Audio		Audio		I<<		First





Original	Replacement	Original	Replacement
 >>	 Last		
 Vol-	 VOL -		
 Vol+	 VOL +		
 V-Mode	 V-FOR V-FOR		
 Repeat	 TEXT TEXT		
 N/P	 Blue (D)		
 Clear	 EXIT EXIT		
 Prog	 OPT+ OPT+		
 A-B	 SHIFT +  Shift + VOD		
 Zoom	 WIDE WIDE		
 Slow	 CH + CH +		
 Random	 CH - CH -		
 Return	 BACK BACK		
 Display	 INFO INFO		
 Step	 Subt. Subt.		

