






















 





 

 






Original	Replacement
 Power	 Power
 Sleep	 Sleep
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 GUIDE
 Recall	 BACK
 Audio	 DUAL
 P.M.	 SMART

Original	Replacement
 Info	 Info
 Input	 AV
 Up / CH+	 Up
 Up / CH+	 Ch +
 Down / CH-	 Down
 Down / CH-	 Ch -
 Right / Vol+ / Enter	 Right
 Left / Vol-	 Left
 Left / Vol-	 Vol -
 Right / Vol+ / Enter	 Vol +
 Right / Vol+ / Enter	 Ok
 Menu	 Menu
 Page+	 >>
 Page-	 <<
 Display	 Shift + Info
 Exit	 Exit
 Red	 Red





Original		Replacement		Original	Replacement
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		
	Size		Eject		
	Stop		Stop		
	Reveal		TV/R		
	Index		Options		
	4:3 / 16:9		Format		
	C.Lock		Media		
	Sub.PG		Subt		
	On/Mix/Off		Text		

