





































Original	Replacement
 Power	 Power
 Sub-T	 Subtitle / EQ
 Lang	 Audio / Lang I/II
 Mute	 Mute / Dimmer
 EPG	 Guide / EPG / -/--
 Goto	 Shift + Text /
 Page+	 CH+ / Page+
 TTX	 Text / Goto
 Repeat	 Shift + Green / APP /
 Page-	 CH- / Page-
 Menu	 Menu / Home
 Up/CH+	 Up
 Exit	 Exit / Cancel / Clear
 Vol-	 Vol-
 Left	 Left
 OK	 OK
 Right	 Right

Original	Replacement
 Vol+	 Vol+
 FAV	 Fav / Marker / PC
 Down/CH-	 Down
 Tv/Radio	 TV/Radio /
 1	 1
 2	 2
 3	 3
 Recall	 Back / Return
 4	 4
 5	 5
 6	 6
 Info	 Info / Angle
 7	 7
 8	 8
 9	 9
 0	 0
 <<	 << / Tune-













 
























Original		Replacement		Original	Replacement
[Fast Forward]	>>	[TUNE+]	>> / Tune+		
[Fast Rewind]	<<	[PRESET-]	<< / Preset-		
[Play/Pause]	>>	[PRESET+]	>> / Preset+		
[Play]	Play	[SLOW]	Play / Slow		
[Pause]	Pause/Time Shift	[STEP - FREEZE]	Pause / Step / Freeze		
[Stop]	Stop	[HOLD]	Stop / Hold		
[Red]	Rec	[REC MODE]	Rec / Rec Mode		
[Red]	Red/PVR	[NETFLIX]	Red / Netflix / Search		
[Green]	Green/V-Format	[APP]	Green / APP / Repeat		
[Yellow]	Yellow/Aspect	[YouTube]	Yellow / YouTube / Repeat		
[Blue]	Blue/Timer	[Prime Video]	Blue / Prime Video / Random		





Original	Replacement
 Power	 Power
 Sub-T	 Subtitle / EQ
 Lang	 Audio / Lang I/II
 Mute	 Mute / Dimmer
 EPG	 Guide / EPG / -/--
 Goto	 Shift + Text /
 Page+	 CH+ / Page+
 TTX	 Text / Goto
 Repeat	 Shift + Green / APP /
 Page-	 CH- / Page-
 Menu	 Menu / Home
 Up/CH+	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 Vol-	 Vol-
 OK	 OK
 Right	 Right

Original	Replacement
 Vol+	 Vol+
 FAV	 Fav / Marker / PC
 Down/CH-	 Down
 Tv/Radio	 TV/Radio /
 1	 1
 2	 2
 3	 3
 Recall	 Back / Return
 4	 4
 5	 5
 6	 6
 Info	 Info / Angle
 7	 7
 8	 8
 9	 9
 0	 0
 <<	 << / Tune-





Original	Replacement	Original	Replacement
>>	>> / Tune+		
I<<	I<< / Preset-		
>>I	>>I / Preset+		
Play	Play / Slow		
Pause/Timeshift	Pause / Step / Freeze		
Stop	Stop / Hold		
Rec	Rec / Rec Mode		
Red/PVR	Red / Netflix / Search		
Green/V-Format	Green / APP / Repeat		
Yellow/Aspect	Yellow / YouTube / Repeat		
Blue/Timer	Blue / Prime Video / Random		

