







 



 



 

 

 

 

 

 

 

 

 



 
 
 

 

 






Original	Replacement
	 Mute / Dimmer
	 Power
	 TV/Radio /
	 Shift + 2
	 Shift + TV/Radio / Program
	 Shift + Rec / Rec Mode
	 Shift + Yellow / YouTube /
	 Audio / Lang I/II
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9

Original	Replacement
	 0
	 Guide / EPG / -/-
	 Smart / List
	 Picture / Format
	 Text / Goto
	 Menu / Home
	 Exit / Cancel / Clear
	 Info / Angle
	 Vol+
	 Up
	 CH+ / Page+
	 Left
	 OK
	 Right
	 Vol-
	 Down
	 CH- / Page-














 
 

 

 


 



Original	Replacement	Original	Replacement
	Red / Netflix / Search		
	Green / APP / Repeat		
	Yellow / YouTube / Repeat		
	Blue / Prime Video / Random		
	<< / Tune-		
	Play / Slow		
	>> / Tune+		
	Rec / Rec Mode		
	Shift + Stop /		
	Pause / Step / Freeze		
	Stop / Hold		





Original	Replacement
	 Mute / Dimmer
	 Power
	 TV/Radio /
	 Shift + 2
	 Shift + TV/Radio / Program
	 Shift + Rec / Rec Mode
	 Shift + Yellow / YouTube /
	 Audio / Lang I/II
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9

Original	Replacement
	 0
	 Guide / EPG / -/-
	 Smart / List
	 Picture / Format
	 Text / Goto
	 Menu / Home
	 Exit / Cancel / Clear
	 Info / Angle
	 Vol+
	 Up
	 CH+ / Page+
	 Left
	 OK
	 Right
	 Vol-
	 Down
	 CH- / Page-





 



 



 

 

 













 







Original	Replacement	Original	Replacement
Red/C-Set	Red / Netflix / Search		
Green/SV	Green / APP / Repeat		
Yellow/Zoom	Yellow / YouTube / Repeat		
Blue/Marker	Blue / Prime Video / Random		
<<	<< / Tune-		
Play	Play / Slow		
>>	>> / Tune+		
Rec	+ Shift + Stop /		
Rec	Rec / Rec Mode		
Pause	Pause / Step / Freeze		
Stop	Stop / Hold		





Original	Replacement
	 Power
	 Mute / Dimmer
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold
	 Rec / Rec Mode
	 << / Tune-
	 >> / Tune+
	 Audio / Lang I/II
	 Picture / Format
	 TV/Radio /
	 Text / Goto
	 Menu / Home
	 Up
	 Info / Angle
	 Left
	 OK

Original	Replacement
	 Right
	 Exit / Cancel / Clear
	 Down
	 Vol+
	 Smart / List
	 CH+ / Page+
	 Vol-
	 CH- / Page-
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9


























































Original	Replacement
EPG/DVD-AV	Guide / EPG / -/--
0/AV	0
Red/C-Set	Red / Netflix / Search
Green/SV	Green / APP / Repeat
Yellow/Zoom	Yellow / YouTube / Repeat
Blue/Marker	Blue / Prime Video / Random
Rec	Shift + Stop /
Rec Menu	Shift + Rec / Rec Mode
Radio	Shift + TV/Radio / Program
DVD	Shift + 2
[-]-/←-AB	Shift + Yellow / YouTube /

Original	Replacement





Original	Replacement	Original	Replacement
Power	 Power	Right	 Right
Mute	 Mute / Dimmer	End	 Exit / Cancel / Clear
Play	 Play / Slow	Down	 Down
Pause	 Pause / Step / Freeze	Vol+	 Vol+
Stop	 Stop / Hold	Assist/Card	 Smart / List
Rec	 Rec / Rec Mode	P+	 CH+ / Page+
<<	 << / Tune-	Vol-	 Vol-
>>	 >> / Tune+	P-	 CH- / Page-
Audio	 Audio / Lang I/II	1	 1
PIP	 Picture / Format	2	 2
TV	 TV/Radio /	3	 3
Text/Disc-M	 Text / Goto	4	 4
Menu	 Menu / Home	5	 5
Up	 Up	6	 6
Info	 Info / Angle	7	 7
Left	 Left	8	 8
OK	 OK	9	 9

Right	 Right	1	 1
End	 Exit / Cancel / Clear	2	 2
Down	 Down	3	 3
Vol+	 Vol+	4	 4
Assist/Card	 Smart / List	5	 5
P+	 CH+ / Page+	6	 6
Vol-	 Vol-	7	 7
P-	 CH- / Page-	8	 8
1	 1	9	 9
2	 2		
3	 3		
4	 4		
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		





Original	Replacement	
EPG/DVD-AV		Guide / EPG / -/--
0/AV		0
Red/C-Set		Red / Netflix / Search
Green/SV		Green / APP / Repeat
Yellow/Zoom		Yellow / YouTube / Repeat
Blue/Marker		Blue / Prime Video / Random
Rec		Shift + Stop /
Rec Menu		Shift + Rec / Rec Mode
Radio		Shift + TV/Radio / Program
DVD		Shift + 2
-[]/-←AB		Shift + Yellow / YouTube /

Original	Replacement

