


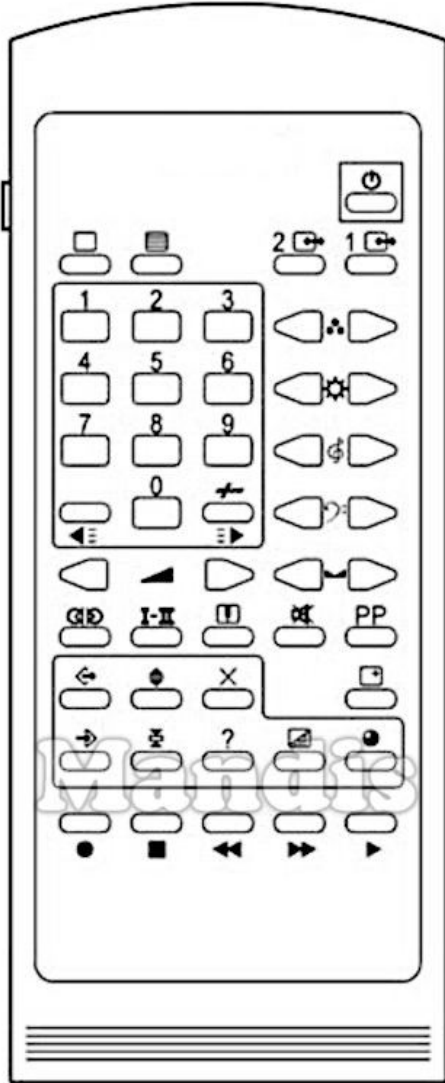














Original	Replacement	Original	Replacement
Power	Power	9	9
TV	Smart / List	Sol-	<< / Tune-
Text	Text / Goto	Sol+	>> / Tune+
Source 2	Shift + AV / Input / RDS	=>	Shift + CH- /
Source 1	AV / Input / RDS	0	0
1	1	<-> / =>	Shift + CH+ /
2	2	<-> / =>	Guide / EPG / <->
3	3	Fa-	Left
Contrast-	I<< / Preset-	Fa+	Right
Contrast+	>>I / Preset+	Vol-	Vol-
4	4	Vol+	Vol+
5	5	><-	CH- / Page-
6	6	><+	CH+ / Page+
Brightness-	Down	OO	Sound / Title
Brightness+	Up	I-II	Audio / Lang I/II
7	7	[]	Zoom / Size
8	8	Mute	Mute / Dimmer





	Original	Replacement	Original	Replacement
1	PP	 Back / Return		
2	Exit	 Exit / Cancel / Clear		
3	Size	 +  Shift + Zoom /		
4	Cancel	 +  Shift + Exit / Cancel / Clear		
5	[+]	 Info / Angle		
6	Enter	 OK		
7	Hold	 Stop / Hold		
8	Reveal	 TV/Radio /		
9	Mix	 +  Shift + Text /		
10	Subcode	 Subtitle / EQ		
11				
12				
13				
14				
15				
16				
17				
18				
19				

