


 


 
 
 
 

 

 
 
 

 
 






 
 



 






 

 

 

 

 









 



 



 

 


 


 




 



 


 





 

 
 









 



Original	Replacement	Original	Replacement
	Power		Power
	Info		Info
	Setup		Options
	Mute		Mute
	Menu		Menu
	Music		Media
	Copy		3D
	Zoom		Eject
	TV System		TV/R
	Source		AV
	Vol+		Vol +
	Vol-		Vol -
	Return		Back
	Home		Smart
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Timeshift		Sleep
	Goto		Pre Ch
	Rec		Rec
	Play		Play
	Stop		Stop





Original	Replacement	Original	Replacement
 PAUSE	Pause	 PAUSE	Pause
 PREV	I<<	 PREV	I<<
 NEXT	>>I	 NEXT	>>I
 FR	<<	 FR	<<
 FF	>>	 FF	>>
 SLOW	I>/Slow	 PICTURE FORMAT	Format
 A-B	A-B	 E-MANUAL D.MENU	D. Menu
 TIMER	Timer	 SHIFT + TIMER AV	Shift + AV
 RECLIST	Rec List	 DISC NAV LIST	List
 SUBTITLE	Subtitle	 AD SUBT	Subt
 REPEAT	Repeat	 SHIFT + REPEAT TEXT	Shift + Text
 AUDIO	Audio	 SOUND DUAL	Dual
 Red	Red	 A	Red
 EPG	Green	 B	Green
 TTX	Yellow	 C	Yellow
 Blue	Blue	 D	Blue
 TTX	TTX	 REPEAT TEXT	Text

Original	Replacement	Original	Replacement
 EPG	EPG	 GUIDE	Guide

