

 








 


 







 



 

 

 







 







 



 





 



Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 << / [Timer]	 << / Tune-
 >> / [≡?]	 >> / Tune+
 I<< / [≡⇓]	 I<< / Preset-
 >>I / [≡...]	 >>I / Preset+
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 [≡i]	 Shift + Info / Angle
 Text	 Text / Goto
 Subtitle	 Subtitle / EQ
 Freeze	 Shift + Pause / Step / Freeze

Original	Replacement
 Info	 Info / Angle
 [[]]	 Shift + Audio / Lang I/II
 Source/Av	 AV / Input / RDS
 Up	 Up
 Left	 Left
 Ok	 OK
 Right	 Right
 Down	 Down
 Epg	 Guide / EPG / -/-
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 Fav	 Fav / Marker / PC
 Ch+	 CH+ / Page+
 Vol-	 Vol-
 Rec	 Rec / Rec Mode
 Ch-	 CH- / Page-
 1	 1





	Original	Replacement		Original	Replacement
					
					
					
					
					
					
					
					
			Audio		Audio / Lang I/II
			0		0
			Recall		Back / Return

