

 



 

 

 

 

 







 

 



 

 

 









 





 







 



 











| Original   | Replacement   | Original  | Replacement   |
|--|---|---|---|
|  Power    |  Power             |  7       |  7                 |
|  Mute     |  Mute / Dimmer     |  8       |  8                 |
|  Audio    |  Audio / Lang I/II |  9       |  9                 |
|  TV / STB |  AV / Input / RDS  |  0       |  0                 |
|  TV / R   |  TV/Radio /        |  SAT     |  Shift + 0         |
|  Sleep    |  Sleep / Timer     |  EPG     |  Guide / EPG / -/- |
|  SUB      |  Subtitle / EQ     |  Fav     |  Fav / Marker / PC |
|  TXT      |  Text / Goto       |  PGUP    |  CH+ / Page+       |
|  Multi    |  Display / Media   |  PGDN    |  CH- / Page-       |
|  P / N    |  Picture / Format |  Up      |  Up                |
|  Recall |  Back / Return   |  Right |  Right           |
|  1      |  1               |  FAV + |  Vol+            |
|  2      |  2               |  FAV - |  Vol-            |
|  3      |  3               |  Down  |  Down            |
|  4      |  4               |  Left  |  Left            |
|  5      |  5               |  OK    |  OK              |
|  6      |  6               |  Menu  |  Menu / Home     |





| Original  | Replacement  |
|---|--|
|    |  Exit / Cancel / Clear        |
|    |  Red / Netflix / Search       |
|    |  Green / APP / Repeat         |
|    |  Yellow / YouTube / Repeat    |
|    |  Blue / Prime Video / Random  |
|    |  Pause / Step / Freeze        |
|    |  Zoom / Size                  |
|    |  D.Menu / Top                 |
|    |  Info / Angle                 |
|   |  Shift + 8                   |
|  |  Shift + Yellow / YouTube / |
|  |  Shift + Text /             |
|  |  Shift + 1                  |
|  |  Shift + 2                  |
|  |  Eject / Surround           |
|  |  Stop / Hold                |
|  |  Rec / Rec Mode             |

| Original  | Replacement   |
|---|---|
|  |  Sound / Title |
|  |  << / Tune-    |
|  |  >> / Tune+    |
|  |  Smart / List  |
|  |  Play / Slow   |
|  |  I<< / Preset- |
|  |  Setup / OPT / |
|  |  >>I / Preset+ |

