











 











 

 



 




 


 



 









 



















Original		Replacement		Original		Replacement	
	Power		Power		V-		Vol-
	Source		AV / Input / RDS		World/Internet		Smart / List
	1		1		P-		CH- / Page-
	2		2		Menu		Menu / Home
	3		3		Q.Menu		D.Menu / Top
	4		4		Up		Up
	5		5		Left		Left
	6		6		OK		OK
	7		7		Right		Right
	8		8		Down		Down
	9		9		Back		Back / Return
	TV		TV/Radio /		Exit		Exit / Cancel / Clear
	0		0		i		Info / Angle
	Recall		Fav / Marker / PC		Music/Camera		Display / Media
	V+		Vol+		TV Guide		Guide / EPG / -/-
	Mute		Mute / Dimmer		* / O		Shift + 1
	P+		CH+ / Page+		* / Q		Shift + 2





Original	Replacement	Original	Replacement
 [=]/Text	 GOTO TEXT Text / Goto		
 Red	 NETFLIX SEARCH Red / Netflix / Search		
 Green	 APP REPEAT Green / APP / Repeat		
 Yellow	 YouTube REPEAT A-B Yellow / YouTube / Repeat		
 Blue	 Prime Video RANDOM Blue / Prime Video / Random		
 LANG.	 LANG I/II AUDIO Audio / Lang I/II		
 [=]..	 TITLE SOUND Sound / Title		
 [-O-]	 OPT-TOOLS SETUP Setup / OPT /		
 <<	 TUNE- << / Tune-		
	 STEP-FREEZE Pause / Step / Freeze		
 >>	 TUNE+ >> / Tune+		
 Rec	 REC MODE Rec / Rec Mode		
 ▶	 SLOW ▶ Play / Slow		
 ■	 HOLD ■ Stop / Hold		

