



Original	Replacement
	Power
	PP
	Mute
	1
	2
	3
	4
	5
	6
	7
	8
	9
	P<P
	0
	--
	Info
	I-II

Original	Replacement
	Up
	P+
	Left
	M
	M
	Right
	Down
	P-
	Vol-
	Vol+
	Red/Sound
	Red/Sound
	Green/Picture
	Green/Picture
	Yellow/Feature
	Blue/Install
	TV



