



Original		Replacement		Original		Replacement	
	Sleep		Sleep / Timer		CH/Page+		CH+ / Page+
	Power		Power		ECO		Menu / Home
	CBL/SAT		0		Volume+		Vol+
	DVD		2		CH/Page-		CH- / Page-
	Blu-ray		5		Mute		Mute / Dimmer
	GAME		Fav / Marker / PC		Volume-		Vol-
	AUX		7		Info		Info / Angle
	MEDIA PLAYER		Display / Media		Option		Shift + Setup / OPT / Tools
	TV AUDIO		1		Up		Up
	8K		4		Left		Left
	TUNER		6		Enter		OK
	USB		8		Right		Right
	CD		3		Back		Back / Return
	Bluetooth		9		Down		Down
	Heos		Smart / List		Setup		Setup / OPT /
	PHONO		AV / Input / RDS		I<< / Tune-		<< / Tune-
	INTERNET		Guide / EPG / -/-		I<< / Tune-		I<< / Preset-



















 






 
 



 



 







 



 











 











RADIO



Original		Replacement		Original		Replacement	
	Play/Pause		Play / Slow				
	Play/Pause		Pause / Step / Freeze				
	>>I / Tune+		>>I / Preset+				
	>>I / Tune+		>> / Tune+				
	Smart Select 1		Shift + Red / Netflix /				
	Smart Select 2		Shift + Green / APP /				
	Smart Select 3		Shift + Yellow / YouTube /				
	Smart Select 4		Shift + Blue / Prime Video /				
	Sound Mode Movie / Green		Green / APP / Repeat				
	Sound Mode Music / Red		Red / Netflix / Search				
	Sound Mode Game / Blue		Blue / Prime Video / Random				
	Sound Mode Pure / Yellow		Yellow / YouTube / Repeat				




 


Original	Replacement	Original	Replacement
 Sleep	 Sleep / Timer	 CH/Page+	 CH+ / Page+
 Power	 Power	 Volume+	 Vol+
 CBL/SAT	 0	 CH/Page-	 CH- / Page-
 DVD	 2	 Mute	 Mute / Dimmer
 Blu-ray	 5	 Volume-	 Vol-
 GAME	 Fav / Marker / PC	 Up	 Up
 AUX	 7	 Left	 Left
 MEDIA PLAYER	 Display / Media	 Enter	 OK
 TV AUDIO	 1	 Right	 Right
 8K	 4	 Back	 Back / Return
 TUNER	 6	 Down	 Down
 USB	 8	 I<< / Tune-	 I<< / Preset-
 CD	 3	 I<< / Tune-	 << / Tune-
 Bluetooth	 9	 Play / Pause	 Play / Slow
 Heos	 Smart / List	 Play / Pause	 Pause / Step / Freeze
 PHONO	 AV / Input / RDS	 >>I / Tune+	 >> / Tune+
 INTERNET	 Guide / EPG / -/--	 >>I / Tune+	 >>I / Preset+



RADIO



Original	Replacement	Original	Replacement
 Smart Select 1	 Red / Netflix / Search		
 Smart Select 2	 Green / APP / Repeat		
 Smart Select 3	 Yellow / YouTube / Repeat		
 Smart Select 4	 Blue / Prime Video / Random		

