



| Original | Replacement |
|---|---|
|  Power |  Power |
|  Red / ↑ |  Red / Netflix / Search |
|  Green / ↓ |  Green / APP / Repeat |
|  Yellow |  Yellow / YouTube / Repeat |
|  Blue |  Blue / Prime Video / Random |
|  M |  Menu / Home |
|  Return |  Back / Return |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Down |  Down |
|  Source |  AV / Input / RDS |
|  Presets |  D.Menu / Top |
|  Info |  Info / Angle |
|  EPG |  Guide / EPG / -/-- |
|  Vol+ |  Vol+ |

| Original | Replacement |
|--|---|
|  Mute |  Mute / Dimmer |
|  P+ |  CH+ / Page+ |
|  Vol- |  Vol- |
|  P- |  CH- / Page- |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  FAV |  Shift + Fav / Marker / PC |
|  0 |  0 |
|  Recall |  Fav / Marker / PC |
|  Screen |  Picture / Format |





| Original | Replacement |
|----------|-------------------|
| Lang | Audio / Lang I/II |
| Subtitle | Subtitle / EQ |
| Sleep | Sleep / Timer |
| (O) | Display / Media |
| | Smart / List |
| [≡x] | TV/Radio / |
| [≡] | Text / Goto |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

| Original | Replacement |
|----------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

