
 


 


















 
 




 






 



 
 


 








 

 

 

 
 


 



 




Original	Replacement	Original	Replacement
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Play	Menu Off	 Exit
Reveal	 Pause	Menu Down	 Down
Txt Stop	 Stop	Back	 Back
Info	 Rec	Volume+	 Vol +
Subt.List	 Subt	Chan.Up	 Ch +
Sleep Timer	 Sleep	Volume-	 Vol -
Return TV	 TV/R	Menu audio	 List
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7



Original	Replacement	Original	Replacement
8	 8	Search	 +  Shift + TV/R
9	 9	Bright+ Mode	 +  Shift + Menu
Guide -/-- 1.	 Guide	Disp	 +  Shift + Info
0/10	 0	Tune-	 +  Shift + Left
2.Fav P/C 2.	 Pre Ch	Aft/Caf	 +  Shift + Ok
Red	 Red	Store	 Smart
Green	 Green	Tune+	 +  Shift + Right
Yellow	 Yellow	Bright- Sys	 +  Shift + Exit
Blue	 Blue	Contrast+	 +  Shift + Ch +
Rotate Text	 +  Shift + Mute	Color- S.Std	 Dual
Audio-	 +  Shift + Vol -	Contrast-	 +  Shift + Ch -
Tone-	 Media	3.*	 +  Shift + Guide
Audio+	 +  Shift + Vol +	Nicam/Mono	 +  Shift + Green
Color+ P.Std	 +  Shift + Format	Level L	 +  Shift + Yellow
On/Tim	 +  Shift + Subt	Level R/Woofer	 +  Shift + Blue
Store Text	 +  Shift + Text	4.# 16:9	 Format
AV 2	 +  Shift + AV		



Original	Replacement	Original	Replacement
Power		Power	
Recall		Up	
1		Left	
2		OK	
3		Right	
4		Down	
5		Vol +	
6		Vol -	
7		LCD Menu	
8		Exit / DVD Setup	
9		Exit / DVD Setup	
0		D.Menu	
AV / Input		D.Disp	 + 
-/--	 + 	Red / Prog	
EPG		Green / Intro	
P +		Yellow / Repeat	
P -		Blue / A-B	



Original	Replacement	Original	Replacement
Title	 Smart	>>I / Hold	 +  Shift + Stop
Eject / PC Auto	 +  Shift + Exit	Reveal / Angle	 Format
<< / Index	 <<	Subpage /	 Eject
Play/Pause / Fav	 Play	Lang / Audio	 +  Shift + Dual
Play/Pause / Fav	 Pre Ch	□ / Goto	 TV/R
>> / Size	 >>	Subtitle	 Subt
Rec / S.Mode	 Rec	Info	 Info
Rec / S.Mode	 Dual		
Step >I / Fav +	 +  Shift + Play		
Step >I / Fav +	 +  Shift + Up		
Pause / P.Mode	 Pause		
Pause / P.Mode	 +  Shift + Format		
I<< / Text	 I<<		
I<< / Text	 Text		
Stop / Fav -	 Stop		
Stop / Fav -	 +  Shift + Down		
>>I / Hold	 >>I		

