






 


 





Original	Replacement
 Power	 Power
 I<<	 I<< / Preset-
 Eject	 Eject / Surround
 <<	 << / Tune-
 >>	 >> / Tune+
 >>	 >> / Preset+
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 TV/TXT /	 Setup / OPT /
 TV/TXT /	 Shift + Goto Text / Text /
 Cancel / Zoom	 Shift + Exit / Cancel / Clear
 Reveal / Subtitle	 Shift + Subtitle / EQ
 Stop	 Stop / Hold
 Hold / Menu	 Shift + Hold / Stop /
 Hold / Menu	 Shift + Home / Menu /
 Size / Angle	 Zoom / Size
 Subpage / Title	 Shift + Sound / Title

Original	Replacement
 Index / Goto	 Info / Angle
 Red / Program	 Red / Netflix / Search
 Green / Slow	 Green / APP / Repeat
 Yellow / Repeat	 Yellow / YouTube / Repeat
 Blue / A-B	 Blue / Prime Video / Random
 CH +	 CH+ / Page+
 Sys-Menu	 Menu / Home
 Vol +	 Vol+
 CH -	 CH- / Page-
 Input / Sourc	 AV / Input / RDS
 Vol -	 Vol-
 DVD	 Shift + 2
 DVD-Setup	 D.Menu / Top
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right





Original		Replacement		Original		Replacement	
	Down		Down		Nicam / A2		Audio / Lang I/II
	DVB		Smart / List		Mute		Mute / Dimmer
	Sys-Exit		Exit / Cancel / Clear		Sleep		Sleep / Timer
	1		1		TV / Radio		TV/Radio /
	2		2		FAV		Fav / Marker / PC
	3		3		Fav +		Shift + CH+ /
	4		4		Fav -		Shift + CH- /
	5		5		Pic. Format		Shift + Picture / Format
	6		6		Subtitle		Subtitle / EQ
	7		7		Text		Text / Goto
	8		8		Display		Display / Media
	9		9		Language		Shift + Audio / Lang I/II
	-/--		Shift + Guide / EPG / -/--		EPG		Guide / EPG / -/--
	0		0				
	Recall		Back / Return				
	Picture		Picture / Format				
	Sound		Sound / Title				

