 

 



 
 




| Original | Replacement | Original | Replacement |
|--|--|--|--|
|  Standby |  Power |  Info |  Info |
|  DTV/VCR |  Smart |  Menu |  Menu |
|  Mute |  Mute |  EPG |  Guide |
|  1 |  1 |  Exit |  Exit |
|  2 |  2 |  CH+ |  Ch + |
|  3 |  3 |  CH- |  Ch - |
|  4 |  4 |  Up |  Up |
|  5 |  5 |  Down |  Down |
|  6 |  6 |  Right |  Right |
|  7 |  7 |  Left |  Left |
|  8 |  8 |  OK |  Ok |
|  9 |  9 |  Vol+ |  Vol + |
|  0 |  0 |  Vol- |  Vol - |
|  FAV |  Pre Ch |  Text |  Text |
|  Audio |  Dual |  Red |  Red |
|  Recall |  Back |  Green |  Green |
|  Subtitle |  Subt |  Yellow |  Yellow |



