



Original	Replacement
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 ASPECT	 Format
 P.C.	 Pre Ch
 MENU	 Menu
 SOURCE	 Shift + AV
 Up	 Up

Original	Replacement
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 Ok
 Exit	 Exit
 Display	 Info
 Vol +	 Vol +
 Vol -	 Vol -
 CH +	 Ch +
 CH -	 Ch -
 Sound	 Dual
 PIC	 Shift + Format
 NICAM	 Media
 SLEEP	 Sleep
 TV	 Smart
 AV	 AV
 HDMI	 Shift + Media





Original	Replacement	Original	Replacement
SCART1	AD SUBT		Subt
Y.Pb.Pr	SHIFT + AD SUBT		Shift + Subt
RECALL	RETURN BACK		Back
Red	A		Red
Green	B		Green
Yellow	C		Yellow
Blue	D		Blue
REVEAL	PLAY MODE		Play
HOLD	II		Pause
LIST	DISC NAV LIST		List
INDEX	■		Stop
SUBPAGE	REC MODE		Rec
SIZE	ECO 3D		3D
AUTO	-/- GUIDE		Guide
TEXT	REPEAT TEXT		Text

