



















 

 

 










 




















































Original	Replacement	Original	Replacement
	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	C		Setup / OPT /
	0		0
	Saturn		Display / Media
	Book		Picture / Format
	N9UF		Shift + 9
	Text		Text / Goto
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	V +		Vol+
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	P +		CH+ / Page+
	V -		Vol-
	Down		Down
	P -		CH- / Page-
	Back		Back / Return
	i		Info / Angle
	<<		<< / Tune-
	I<<		I<< / Preset-





Original

Replacement

	NAV		Smart / List
	>>		>> / Tune+
	>>		>> / Preset+
	Play / Pause		Play / Slow
	Play / Pause		Shift + Play /
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
		Menu / Home

Original

Replacement

