





 



 

 

 

 











 

 

 



















 



Original	Replacement
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 EPG	 Guide / EPG / -/--
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 APPS	 Shift + Green / APP / Repeat

Original	Replacement
 Home	 Shift + Menu /
 P+	 CH+ / Page+
 P-	 CH- / Page-
 Menu	 Menu / Home
 i	 Info / Angle
 Back	 Back / Return
 Mouse	 Display / Media
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 Netflix	 Shift + Red / Netflix /
 YouTube	 Shift + Yellow / YouTube /
 prime video	 Shift + Blue / Prime
 f	 Smart / List
 Red	 Red / Netflix / Search





Original		Replacement		Original	Replacement
	Green		Green / APP / Repeat		
	Yellow		Yellow / YouTube / Repeat		
	Blue		Blue / Prime Video / Random		
	Pause		Pause / Step / Freeze		
	Play		Play / Slow		
	Stop		Stop / Hold		
	<<		<< / Tune-		
	>>		>> / Tune+		
	Text		Text / Goto		
	Rec		Rec / Rec Mode		
	I<<		I<< / Preset-		
	>>I		>>I / Preset+		
	MTS		Fav / Marker / PC		
	Sub		Subtitle / EQ		

