




 
 




Original	Replacement
Power	Power
Power TV	+ Shift + Power
Tv Vol+	Vol+
Open/Close	Eject / Surround
AV Input TV	AV / Input / RDS
Tv Vol-	Vol-
Internet	Smart / List
1	1
2	2
3	3
Skype	+ Shift + Green / APP /
4	4
5	5
6	6
3D	+ Shift + 3
7	7
8	8

Original	Replacement
9	9
PIP	Picture / Format
Cancel	+ Shift + Exit / Cancel / Clear
0	0
Audio	Audio / Lang I/II
Secondary	Sound / Title
<< Search	<< / Tune-
Play	Play / Slow
Search >>	>> / Tune+
I<< Skip	I<< / Preset-
Pause	Pause / Step / Freeze
Skip >>I	>>I / Preset+
Status	Info / Angle
Stop	Stop / Hold
Exit	Exit / Cancel / Clear
Pop-Up Menu	Display / Media
Top Menu	D.Menu / Top





Original	Replacement	Original	Replacement
 Up	 Up		
 Home	 Menu / Home		
 Left	 Left		
 OK	 OK		
 Right	 Right		
 Option	 Setup / OPT /		
 Down	 Down		
 Return	 Back / Return		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		

