 
 
 
 

 







 

 




 

 




	Original	Replacement	
	POWER	 Power	
	VOL-	 Vol - / Page -	
	VOL+	 Vol + / Page +	
	COMP.	 Comp / Video	
	VIDEO	 Shift + Comp / Video	
	AUTO ADJ.	 Auto	
	D-Zoom	 Eco / Aspect	
	UP	 Up	
	LEFT	 Left	
	ENTER	 Enter	
	RIGHT	 Right	
	DOWN	 Down	
	MENU	 Menu	
	RESET	 Mode	

Original	Replacement

