 


 










 


 




 


 







 



 

 

 

 






 
 
 
 







 








Original		Replacement		Original		Replacement	
	Power		Power		Display		Info
	Auto / Eject		Eject		CH+		Ch +
	1		1		CH-		Ch -
	2		2		Up		Up
	3		3		Left		Left
	4		4		Enter		Ok
	5		5		Right		Right
	6		6		Down		Down
	7		7		Menu		D. Menu
	8		8		LCD Menu		Menu
	9		9		DVD Setup		Options
	0		0		Input		AV
	-/--		Guide		P.Mode		Format
	Back		Back		A.Mode		Dual
	Vol+		Vol +		Mute		Mute
	Vol-		Vol -		Play / Pause		Play
	Title		Smart		Stop		Stop





Original		Replacement		Original	Replacement
	Slow / Step		Pause		
	Audio / Nicam	 + 	Shift + Dual		
	Text / <<		Text		
	Text / <<		<<		
	>> / Mix		>>		
	Hold / Goto	 + 	Shift + Stop		
	Picture / Subtitle	 + 	Shift + Format		
	I<< / Index		I<<		
	>>I / Size		>>I		
	Reveal / Zoom	 + 	Shift + Eject		
	Subpage /	 + 	Shift + Subt		
	Picture / Subtitle		Subt		
	Red / Program		Red		
	Green / Intro		Green		
	Yellow / Repeat		Yellow		
	Blue / A-B		Blue		

