 







 



 

 
 
 





 







 

 



 

 

 



Original	Replacement	Original	Replacement
	Power		Vol +
	Mute		MTS
	1		CH +
	2		Vol -
	3		Aspect
	4		CH -
	5		Guide
	6		Home
	7		Rec
	8		Menu
	9		Up
	List		Source
	0		Left
	Recall		Enter
	P.Mode		Right
	S.Mode		Exit
	Sleep		Down
	Mute / Dimmer		Vol+
	1		Info / Angle
	2		CH+ / Page+
	3		Vol-
	4		Shift + Picture / Format
	5		CH- / Page-
	6		Guide / EPG / -/-
	7		Shift + Menu /
	8		Rec / Rec Mode
	9		Menu / Home
	Smart / List		Up
	0		AV / Input / RDS
	Back / Return		OK
	Picture / Format		Right
	Sound / Title		Exit / Cancel / Clear
	Sleep / Timer		Down





Original	Replacement
 Display	 Display / Media
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 << / Index	 << / Tune-
 Play/Pause /	 Pause / Step / Freeze
 Play/Pause /	 Shift + Exit / Cancel / Clear
 Play/Pause /	 Play / Slow
 >> / TTX	 >> / Tune+
 >> / TTX	 Text / Goto
 I<< / SUB.PG	 I<< / Preset-
 >>I / Reveal	 >>I / Preset+
 Stop / Mix	 Stop / Hold
 CAP	 D.Menu / Top
 Subtitle	 Subtitle / EQ
 TV / Radio	 TV/Radio /

Original	Replacement
 FAV	 Fav / Marker / PC
 Size / Mouse	 Zoom / Size
 Hold / Refresh	 Shift + Stop /

