



| Original | Replacement |
|--|---|
|  Standby |  Power |
|  Mute |  Mute / Dimmer |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  i / Display |  Display / Media |
|  0 |  0 |
|  Recall / Mouse |  Back / Return |
|  TV / Radio |  TV/Radio / |
|  Audio |  Audio / Lang I/II |
|  SUB-T |  Subtitle / EQ |

| Original | Replacement |
|---|--|
|  Source |  AV / Input / RDS |
|  www / Browser |  Smart / List |
|  Up |  Up |
|  Left |  Left |
|  Enter |  OK |
|  Right |  Right |
|  Menu |  Menu / Home |
|  Down |  Down |
|  Exit |  Exit / Cancel / Clear |
|  Vol + |  Vol+ |
|  Home |  Shift + Menu / |
|  CH + |  CH+ / Page+ |
|  Setup |  Setup / OPT / |
|  CH - |  CH- / Page- |
|  Vol - |  Vol- |
|  Refresh |  Info / Angle |
|  Red |  Red / Netflix / Search |





| Original | Replacement |
|---|---|
|  Green |  Green / APP / Repeat |
|  Yellow |  Yellow / YouTube / Repeat |
|  Blue |  Blue / Prime Video / Random |
|  Screenshot |  D.Menu / Top |
|  Stop |  Stop / Hold |
|  Play/Pause / Size |  Play / Slow |
|  Play/Pause / Size |  Pause / Step / Freeze |
|  Play/Pause / Size |  Zoom / Size |
|  TXT / Mix |  Text / Goto |
|  << / Index |  << / Tune- |
|  >> / Hold |  >> / Tune+ |
|  >> / Hold |  Shift + Stop / |
|  I<< / Reveal |  I<< / Preset- |
|  >>I / Cancel |  >>I / Preset+ |
| | |
| | |
| | |

| Original | Replacement |
|----------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

