








 







 

 

 

 

 



 





 


 
 
 
 
 
 

 
 


Original	Replacement
 Power	 Power
 Mute	 Mute
 Display	 Info
 QV	 Options
 Picture	 Shift + Format
 Sound	 Shift + Dual
 Source	 AV
 EPG	 Guide
 FAV +	 >>
 FAV -	 <<
 FAV	 Pre Ch
 Menu	 Menu
 Size	 Format
 I/II / Top	 Dual
 Exit	 Exit
 Vol -	 Vol -
 Vol +	 Vol +

Original	Replacement
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 CH -	 Ch -
 CH +	 Ch +
 Red / USB Left	 Red
 Red / USB Left	 Shift + Left
 Green / USB	 Green
 Green / USB	 Shift + Down
 Yellow / USB Up	 Yellow
 Yellow / USB Up	 Shift + Up
 Blue / USB Right	 Blue
 Blue / USB Right	 Shift + Right
 1	 1
 2	 2




 


 


 
 

 
 




 
 
 


 

 
 

 





 



Original	Replacement
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Sleep	 Sleep
 10+	 Shift + Guide
 USB/CR / Text	 Media
 USB/CR / Text	 Text
 Play/Pause / Index	 Play
 Play/Pause / Index	 Shift + Info
 Play/Pause / Index	 Pause
 Stop / Cancel	 Stop
 Stop / Cancel	 Shift + Exit

Original	Replacement
 SUBTL	 Subt
 Prog / Mix	 Smart
 Prog / Mix	 Shift + Sleep
 Return / SUBPG	 Back
 Repeat / Reveal	 Shift + Text
 Search / Hold	 TV/R





Original	Replacement	Original	Replacement
	 Power		 9
	 AV		 0
	 Exit		 Guide
	 Menu		 Up
	 Dual		 Right
	 Media		 Ok
	 Options		 Left
	 Text		 Down
	 TV/R		 Subt
	 1		 Pause
	 2		 Rec
	 3		 <<
	 6		 Play
	 5		 >>
	 4		 Shift + Media
	 7		 Shift + Dual
	 8		 Shift + 6

