


 
 



 
 
 



 

 
 
 
 
 

 

 



 



 





Original	Replacement	Original	Replacement
	POWER		Menu / Home
	INFO		Exit / Cancel / Clear
	MUTE		Up
	1		Left
	2		OK
	3		Right
	4		Vol+
	5		Down
	6		CH+ / Page+
	7		Vol-
	8		CH- / Page-
	9		Smart / List
	SOURCE		Sleep / Timer
	0		Guide / EPG / -/-
	AUDIO		Fav / Marker / PC
	Picture / Format		<< / Tune-
	Back / Return		Red / Netflix / Search





	Original	Replacement	Original	Replacement
		 >> / Tune+		
	 GREEN	 Green / APP / Repeat		
		 I<< / Preset-		
	 YELLOW	 Yellow / YouTube / Repeat		
		 Blue / Prime Video / Random		
		 >>I / Preset+		
		 Play / Slow		
		 Pause / Step / Freeze		
		 Text / Goto		
		 Stop / Hold		
		 Subtitle / EQ		
		 TV/Radio /		
		 Setup / OPT /		
		 Display / Media		
		 D.Menu / Top		
		 Rec / Rec Mode		

