
 



 

 

 








Original		Replacement		Original		Replacement	
	Mute		Mute / Dimmer		Left		Left
	Power		Power		OK		OK
	1		1		Vol+		Vol+
	2		2		Right		Right
	3		3		CH-		CH- / Page-
	4		4		Down		Down
	5		5		EPG		Guide / EPG / -/-
	6		6		Red		Red / Netflix / Search
	7		7		TTX		Text / Goto
	8		8		Blue		Blue / Prime Video / Random
	9		9		Audio		Audio / Lang I/II
	Menu		Menu / Home		Green		Green / APP / Repeat
	0		0		Yellow		Yellow / YouTube / Repeat
	Exit		Exit / Cancel / Clear		Subtitle		Subtitle / EQ
	Up		Up		i		Info / Angle
	CH+		CH+ / Page+		FAV		Fav / Marker / PC
	Vol-		Vol-		Tv/Radio		TV/Radio /





Original	Replacement	Original	Replacement
Video	+  Shift + 4		
Scan	AV / Input / RDS		
Record	Rec / Rec Mode		
Device	Smart / List		
File	Display / Media		
Zoom	Zoom / Size		
Prev	I<< / Preset-		
Next	>>I / Preset+		
Roll	Sound / Title		
Play	Play / Slow		
Pause	Pause / Step / Freeze		
<<	<< / Tune-		
>>	>> / Tune+		

Original	Replacement	Original	Replacement

