 










 
 
 

 
 



 
 
 
 




 


 





 


 



 


 
 



 


 
 
 



 

 
 
 

 




Original		Replacement		Original		Replacement	
	Standby		Power		TV / Radio		TV/R
	Mute		Mute		Menu		Menu
	1		1		Exit		Exit
	2		2		Up		Up
	3		3		Right		Right
	4		4		Down		Down
	5		5		Left		Left
	6		6		OK		Ok
	7		7		Record		Rec
	8		8		Stop		Stop
	9		9		Vol +		Vol +
	0		0		Vol -		Vol -
	Info		Info		TTX		Text
	Recall		Back		FAV		Pre Ch
	EPG		Guide		CH +		Ch +
	Audio		Dual		CH -		Ch -
	Subtitle		Subt		Media		Media





Original		Replacement		Original		Replacement	
	USB		Smart				
	I<< Prev		I<<				
	Next >>I		>>I				
	Play		Play				
	Pause		Pause				
	<< Rew		<<				
	Fwd >>		>>				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

