









 

 





 







 




 
 





| Original  | Replacement   |
|---|---|
|    |  Power                       |
|    |  Red / Netflix / Search      |
|    |  Green / APP / Repeat        |
|    |  Yellow / YouTube / Repeat   |
|    |  Blue / Prime Video / Random |
|    |  Menu / Home                 |
|    |  Smart / List                |
|    |  Up                          |
|    |  Left                        |
|    |  OK                          |
|   |  Right                      |
|  |  Down                      |
|  |  AV / Input / RDS          |
|  |  TV/Radio /                |
|  |  Info / Angle              |
|  |  Audio / Lang I/II         |
|  |  Vol+                      |

| Original  | Replacement  |
|---|--|
|    |  CH+ / Page+                  |
|    |  Vol-                         |
|    |  Mute / Dimmer                |
|    |  CH- / Page-                  |
|    |  1                            |
|    |  2                            |
|    |  3                            |
|    |  4                            |
|    |  5                            |
|    |  6                            |
|   |  7                            |
|  |  8                          |
|  |  9                          |
|  |  Back / Return              |
|  |  0                          |
|  |  Exit / Cancel / Clear      |
|  |  Shift + Guide / EPG / -/-- |



