


 



 



 


 



 









 






 

 

 
 

 
 

 



 
 
 

 

 


 
 
 
 
 

 


 




Original	Replacement	Original	Replacement
 Power	 Power	 9	 9
 Mute	 Mute	 0	 0
 Up	 Up	 -/--/Exit	 Shift + Guide
 Down	 Down	 P+	 Ch +
 Right	 Right	 P-	 Ch -
 Left	 Left	 Vol+	 Vol +
 OK	 Ok	 Vol-	 Vol -
 Menu	 Menu	 PP	 Pre Ch
 [i]/Info	 Info	 Swap/P<P	 List
 1	 1	 I-II	 Dual
 2	 2	 Tv/DTV	 TV/R
 3	 3	 AV/Source	 AV
 4	 4	 Red/↑	 Red
 5	 5	 Green/↓	 Green
 6	 6	 Yellow	 Yellow
 7	 7	 Blue	 Blue
 8	 8	 [=]/Text	 Text



