


 


 







 

 
 
 



 

 


 



 

 
 
 

 


 
 
 

 


 



 


 





 












Original		Replacement		Original		Replacement	
	Power		Power		Exit		Exit
	Mute		Mute		Up		Up
	Rec List		Smart		Down		Down
	CH/List		Media		Right		Right
	Subtitle		Subt		Left		Left
	Repeat	 + 	Shift + Text		Ok		Ok
	Rec		Rec		1		1
	Stop		Stop		2		2
	I<<		I<<		3		3
	>>I		>>I		4		4
	Pause		Pause		5		5
	Play		Play		6		6
	<<		<<		7		7
	>>		>>		8		8
	Input		AV		9		9
	Display		Info		0		0
	Menu		Menu		Recall		Back





Original		Replacement		Original		Replacement	
	FAV		Pre Ch		Size		Format
	Vol+		Vol +		Hold		TV/R
	Vol-		Vol -		Subpage		D. Menu
	Picture		Shift + Format		Index		List
	Epg		Guide				
	Sound		Dual				
	Sleep		Sleep				
	Ch+		Ch +				
	Ch-		Ch -				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Tv/Txt		Text				
	Cancel		Eject				
	Reveal		3D				
	Nicam/A2		Options				

