



Original	Replacement
Power Receiver	Power
BD/DVD	Shift + 2
CBL/SAT	Shift + 0
Game	Shift + 9
PC	Shift + Fav / Marker / PC
AUX	Shift + 7
TUNER	Shift + 6
TV/CD	Shift + 3
Phono	Shift + 4
NET	Shift + Guide / EPG / -/-
USB	Shift + 8
Display	Display / Media
Muting	Mute / Dimmer
CH/Disc/Album	CH + / Page+
Vol+	Vol+
CH/Disc/Album-	CH - / Page-
Vol-	Vol-

Original	Replacement
Up	Up
Left Playlist	Left
Enter	OK
Right Playlist	Right
Q/Setup	Setup / OPT /
Down	Down
Return	Back / Return
Home/Audio	Audio / Lang I/II
I<<	I<< / Preset-
<<	<< / Tune-
>>	>> / Tune+
>>I	>>I / Preset+
Pause	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
Movie/Tv/Search/	Red / Netflix / Search
Music/Repeat/B	Green / APP / Repeat























 

 

 





 

















 

 

 













Original		Replacement	
	Game/Random/		Yellow / YouTube / Repeat
	Stereo/Mode/D		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	+10/--/---10/Dimmer/D.Tun		Guide / EPG / --/--
	0/11		0
	CLR/Sleep/12		Fav / Marker / PC
	CLR/Sleep/12		Sleep / Timer
	CLR/Sleep/12		Exit / Cancel / Clear

Original		Replacement	





Original		Replacement		Original		Replacement	
	Power BD/DVD		Power		Down BD/DVD		Down
	Play BD/DVD		Play / Slow		Return BD/DVD		Back / Return
	Pause BD/DVD		Pause / Step / Freeze		Vol+ Receiver		Vol+
	Stop BD/DVD		Stop / Hold		BD/DVD		Smart / List
	<< BD/DVD		<< / Tune-		Vol- Receiver		Vol-
	>> BD/DVD		>> / Tune+		CBL/SAT		Display / Media
	I<< BD/DVD		I<< / Preset-		1 BD/DVD		1
	>>I BD/DVD		>>I / Preset+		2 BD/DVD		2
	Audio BD/DVD		Audio / Lang I/II		3 BD/DVD		3
	Top Menu		D.Menu / Top		4 BD/DVD		4
	Setup BD/DVD		Setup / OPT /		5 BD/DVD		5
	Menu BD/DVD		Menu / Home		6 BD/DVD		6
	Up BD/DVD		Up		7 BD/DVD		7
	Left BD/DVD		Left		8 BD/DVD		8
	Enter BD/DVD		OK		9 BD/DVD		9
	Right BD/DVD		Right		+10/--/--10		Guide / EPG / -/-
	CLR/12 BD/DVD		Exit / Cancel / Clear		0/11 BD/DVD		0



 


 
 



Original	Replacement
CLR/12 BD/DVD	Fav / Marker / PC
Search BD/DVD	Red / Netflix / Search
Repeat BD/DVD	Green / APP / Repeat
Stereo/Mode	Yellow / YouTube / Repeat
Random	Blue / Prime Video / Random
Power CBL/SAT	Shift + Power
Play CBL/SAT	Shift + Play /
Pause CBL/SAT	Shift + Pause / Step /
Stop CBL/SAT	Shift + Stop /
<< CBL/SAT	Shift + << /
>> CBL/SAT	Shift + >> /
Setup CBL/SAT	Shift + Setup / OPT / Tools
Menu/Prev CH CBL/SAT	Shift + Menu /
Up CBL/SAT	Shift + Up
Left CBL/SAT	Shift + Left
Enter CBL/SAT	Shift + OK
Right CBL/SAT	Shift + Right

Original	Replacement
Down CBL/SAT	Shift + Down
Return CBL/SAT	Shift + Back / Return
CH Disc/Album+ CBL/SAT	Shift + CH+ /
CH Disc/Album- CBL/SAT	Shift + CH- /
1 CBL/SAT	Shift + 1
2 CBL/SAT	Shift + 2
3 CBL/SAT	Shift + 3
4 CBL/SAT	Shift + 4
5 CBL/SAT	Shift + 5
6 CBL/SAT	Shift + 6
7 CBL/SAT	Shift + 7
8 CBL/SAT	Shift + 8
9 CBL/SAT	Shift + 9
Guide CBL/SAT	Shift + Guide / EPG / -/--
0/11 CBL/SAT	Shift + 0
Movie Tv/Search CBL/SAT	Shift + Red / Netflix /
Music/Repeat CBL/SAT	Shift + Green / APP / Repeat

















 



 














 























Original	Replacement	Original	Replacement
	 + 		
	 + 		





Original		Replacement		Original		Replacement	
	Power CD		Power		TV/CD		Smart / List
	Play CD		Play / Slow		CH/Disc+ CD		CH+ / Page+
	Pause CD		Pause / Step / Freeze		Vol- Receiver		Vol-
	Stop CD		Stop / Hold		CH/Disc- CD		CH- / Page-
	<< CD		<< / Tune-		1 CD		1
	>> CD		>> / Tune+		2 CD		2
	I<< CD		I<< / Preset-		3 CD		3
	>>I CD		>>I / Preset+		4 CD		4
	Audio CD		Audio / Lang I/II		5 CD		5
	Setup CD		Setup / OPT /		6 CD		6
	Up CD		Up		7 CD		7
	Left CD		Left		8 CD		8
	Enter CD		OK		9 CD		9
	Right CD		Right		+10/--/--10/D.Tun/ Dimmer CD		Guide / EPG / -/-
	Down CD		Down		0/11 CD		0
	Return CD		Back / Return		CLR/Sleep/12		Fav / Marker / PC
	Vol+ Receiver		Vol+		Search CD		Red / Netflix / Search





Original	Replacement	Original	Replacement
 Repeat CD	 Green / APP / Repeat		
 Mode CD	 Yellow / YouTube / Repeat		
 Random CD	 Blue / Prime Video / Random		







Original	Replacement	Original	Replacement
Power Receiver Zone 2	Power	>> Zone 2	>> / Tune+
CH Disc/Album+ Zone 2	CH+ / Page+	Pause Zone 2	Pause / Step / Freeze
Vol+ Zone 2	Vol+	Stop Zone 2	Stop / Hold
CH Disc/Album- Zone 2	CH- / Page-	Movie Tv Zone	Red / Netflix / Search
Vol- Zone 2	Vol-	Music Zone 2	Green / APP / Repeat
Up Zone 2	Up	Game Zone 2	Yellow / YouTube / Repeat
Left Zone 2	Left	Stereo Zone 2	Blue / Prime Video / Random
Enter Zone 2	OK	1 Zone 2	1
Right Zone 2	Right	2 Zone 2	2
Setup Zone 2	Setup / OPT /	3 Zone 2	3
Down Zone 2	Down	4 Zone 2	4
Return Zone 2	Back / Return	5 Zone 2	5
Audio Zone 2	Audio / Lang I/II	6 Zone 2	6
I<< Zone 2	I<< / Preset-	7 Zone 2	7
>>I Zone 2	>>I / Preset+	8 Zone 2	8
<< Zone 2	<< / Tune-	9 Zone 2	9
Play Zone 2	Play / Slow	+10/--/--10/D.Tun/Dimmer Zone 2	Guide / EPG / -/-





	Original	Replacement
	0/11 Zone 2	 0
	CLR/Sleep/12	 Fav / Marker / PC

	Original	Replacement

