



Original	Replacement
On	Power
Standby	Shift + Power
Input Selector V1	1
Input Selector V2	4
Input Selector V3	7
Input Selector Multi CH	8
Input Selector	2
Input Selector	5
Input Selector Tuner	6
Input Selector CD	3
Dimmer	Shift + Mute / Dimmer
Sleep	Sleep / Timer
CH/Disc+	CH+ / Page+
Vol+	Vol+
CH/Disc-	CH- / Page-
Vol-	Vol-
SP A/B	Menu / Home

Original	Replacement
Up	Up
Muting	Mute / Dimmer
Left	Left
Enter	OK
Right	Right
Return	Back / Return
Down	Down
Setup	Setup / OPT /
Pause /<	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
<< / Tune-	<< / Tune-
>> / Tune+	>> / Tune+
I<< / Preset-	I<< / Preset-
>>I / Preset+	>>I / Preset+
List. Mode Stereo	Red / Netflix / Search
List. Mode	Eject / Surround



 





































 
















 











 


Original	Replacement
List. Mode	Green / APP / Repeat
Listening Mode <	Yellow / YouTube / Repeat
Listening Mode >	Blue / Prime Video / Random
Test Tone	Text / Goto
CH Sel	Info / Angle
Level-	Shift + Left
Level+	Shift + Right
Display	Display / Media
L.Night	Shift + Sleep / Timer
Cine FLTR	Picture / Format

Original	Replacement





Original	Replacement	Original	Replacement
 On	 Power	 Up	 Up
 Standby	 Shift + Power	 Menu	 Menu / Home
 1	 1	 Left	 Left
 2	 2	 Enter	 OK
 3	 3	 Right	 Right
 4	 4	 Return	 Back / Return
 5	 5	 Down	 Down
 6	 6	 Setup	 Setup / OPT /
 7	 7	 Pause	 Pause / Step / Freeze
 8	 8	 Play	 Play / Slow
 9	 9	 Stop	 Stop / Hold
 +10	 Guide / EPG / -/--	 <<	 << / Tune-
 0	 0	 >>	 >> / Tune+
 CLR	 Exit / Cancel / Clear	 I<<	 I<< / Preset-
 CH/Disc+	 CH+ / Page+	 >>I	 >>I / Preset+
 CH/Disc-	 CH- / Page-	 Audio	 Audio / Lang I/II
 Top Menu	 D.Menu / Top	 Subtitle	 Subtitle / EQ





Original	Replacement	Original	Replacement
 Random	 Blue / Prime Video / Random		
 Repeat	 Green / APP / Repeat		
 Display	 Display / Media		

