


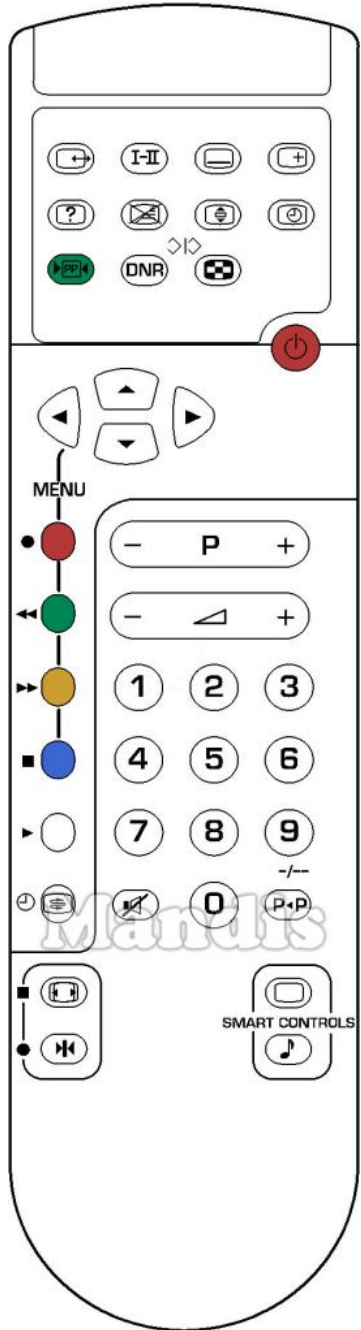

Original	Replacement	Original	Replacement
 Power	 Power	 Red / Menu	 Red
 ><>	 Shift + Menu	 Red / Menu	 Shift + Format
 Source	 AV	 Green / Menu	 Green
 I - II	 Dual	 Green / Menu	 Shift + Dual
 Subtitles	 Subt	 Yellow / Other	 Yellow
 [i +]	 Info	 Yellow / Other	 Menu
 [?]	 D. Menu	 Blue / OK	 Blue
 Mix	 TV/R	 Blue / OK	 Ok
 Zoom	 Eject	 Special Audio	 Shift + Subt
 Time	 Shift + AV	 Text	 Text
 [PP]	 Back	 P -	 Ch -
 DNR	 Options	 P +	 Ch +
 Mosaic	 Guide	 Vol -	 Vol -
 Up	 Up	 Vol +	 Vol +
 Down	 Down	 1	 1
 Right	 Right	 2	 2
 Left	 Left	 3	 3








 











 





 



















 



 











 



 




	Original	Replacement	Original	Replacement
	4			
	5			
	6			
	7			
	8			
	9			
	0			
	Mute			
	P < P			
	Format			
	Freeze			
	Smart Controls Picture			
	Smart Controls Audio			





Original	Replacement	Original	Replacement
	Power		Power
	Time		TV/R
	Zoom		3D
	Mix		Text
	[?]		Shift + Info
	[i+]		Info
	Freeze/Rec		Pause
	Format/Stop		Format
	Source		AV
	I-II		Dual
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Rec		Rec
	<<		<<
	>>		>>
	Stop		Stop
	Play		Play
	Timer		Shift + AV
	P-		Ch -
	P +		Ch +
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/-		Guide

