

 



 





 


 



 
 


 

 

 





 


 
 


 


 


 
 
 
 
 

 
 


 




 
 


 

 
 

 

 
 

 





Original	Replacement	Original	Replacement
	Power		Blue
	Source		Blue
	1		Blue
	2		Shift + Format
	3		Shift + Dual
	4		3D
	5		Text
	6		Dual
	7		Up
	8		Down
	9		Right
	0		Left
	Mute		Ok
	Recall		Ch +
	Red		Ch -
	Green		Vol +
	Yellow		Vol -
			Mute
			Info





	Original	Replacement	Original	Replacement
	Sleep	 Sleep	 >>/PgDn	 >>
	Rec	 Rec	 <</PgUp	 <<
	Menu	 Menu	 Stop	 Stop
	Hold	 Options	 Play	 Play
	MIX	 Media	 Pause	 Pause
	Subpg.	 Shift + Subt	 Repeat	 Shift + Text
	Index	 Exit		
	Size	 Format		
	Reveal	 Smart		
	DTV/Radio	 TV/R		
	EPG	 Guide		
	FAV	 Pre Ch		
	List	 List		
	PVR Menu	 D. Menu		
	DTV Subt.	 Subt		
	I<<	 I<<		
	>>I	 >>I		

