



Original		Replacement		Original		Replacement	
	Power		Power		8		8
	Setup		Options		9		9
	DSK		Format		0		0
	HDMI/AV		AV		Vol+		Vol +
	Edit		D. Menu		Vol-		Vol -
	Copy		Guide		Mute		Mute
	Movie		Red		Up		Up
	Photo		Green		Down		Down
	Music		Yellow		Right		Right
	DIR		Blue		Left		Left
	1		1		Enter		Ok
	2		2		Repeat		Text
	3		3		Step		3D
	4		4		Pause		Pause
	5		5		Play		Play
	6		6		Stop		Stop
	7		7		>>		>>





	Original		Replacement	
	<<		<<	
	>>		>>	
	<<		<<	
	Audio		SOUND DUAL	Dual
	Sub-T		AD SUBT	Subt
	PSM		DISC NAV LIST	List
	Info		DISPLAY INFO	Info
	Home		HOME SMART	Smart
	Exit		CLEAR EXIT	Exit
	S.Show		FAV PRE-CH	Pre Ch
	DVD		APP MEDIA	Media

Original	Replacement

