











 











 

 



 




 


 



 









 



















Original		Replacement		Original		Replacement	
	Power		Power		V-		Vol-
	Source		AV / Input / RDS		World/Internet		Smart / List
	1		1		P-		CH- / Page-
	2		2		Menu		Menu / Home
	3		3		Q.Menu		D.Menu / Top
	4		4		Up		Up
	5		5		Left		Left
	6		6		OK		OK
	7		7		Right		Right
	8		8		Down		Down
	9		9		Back		Back / Return
	TV		TV/Radio /		Exit		Exit / Cancel / Clear
	0		0		i		Info / Angle
	Recall		Fav / Marker / PC		Music/Camera		Display / Media
	V+		Vol+		TV Guide		Guide / EPG / -/-
	Mute		Mute / Dimmer		* / O		Shift + 1
	P+		CH+ / Page+		* / Q		Shift + 2





Original		Replacement		Original		Replacement	
	[≡]/Text		Text / Goto				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	Lang		Audio / Lang I/II				
	[≡]..		Sound / Title				
	[-O-]		Setup / OPT /				
	<<		<< / Tune-				
	Pause		Pause / Step / Freeze				
	>>		>> / Tune+				
	Rec		Rec / Rec Mode				
	Play		Play / Slow				
	Stop		Stop / Hold				

