

 


 

 
 

 
 
 
 






 


 
 
 








 


 
Original	Replacement	Original	Replacement
	Power		Power
	TV		Smart
	VCR/AUX		Media
	Sleep		Sleep
	Tv/AV		AV
	Tuner/Band		TV/R
	DVD/CD		Pre Ch
	FL		3D
	Play Mode-Mix		Shift + Play
	Repeat		Text
	Position		Shift + Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6

Original	Replacement	Original	Replacement
	7		7
	8		8
	9		9
	0		0
	+10/-/-		Guide
	Cancel		Exit
	I<< Skip		I<<
	Skip >>I		>>I
	<< Slow/Search		<<
	Slow/Search >>		>>
	Stop		Stop
	Pause		Pause
	Play		Play
	Top Menu/Direct Navigator		Shift + Menu
	Menu/Play List		Menu
	Display		Info
	Return		Back





 












 


 
 
 
 



 
 
 


 
 



Original	Replacement
	 Up
	 Down
	 Right
	 Left
	 Ok
	 Vol +
	 Vol -
	 Mute
	 Options
	 Subt
	 D. Menu
	 Red
	 Green
	 Yellow
	 List
	 Format
	 Eject

Original	Replacement
	 Blue
	 Dual







	Original	Replacement		Original	Replacement
	Power		Power		
	1		1		
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		
	+10/-/-		Guide		
	Tv/AV		AV		
	CH+		Ch +		
	CH-		Ch -		
	Tv Vol+		Vol +		
	Tv Vol-		Vol -		





Original		Replacement		Original		Replacement	
	Power		Power		Play		Play
	1		1		Stop		Stop
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	+10/+--		Guide				
	>>		>>				
	<<		<<				
	<<		<<				
	>>		>>				
	Pause		Pause				

