

 
 




 



 
 




Original	Replacement
	Power
	Guide
	Tv Input
	AV Input
	Menu
	Text
	[≡◆]/STTL
	[+]/Aspect
	i
	Exit
	Netflix
	APPS
	Left
	Up
	Right
	Home
	OK








 

 
 

 
 









Replacement	Original
	Power
	Guide / EPG / -/--
	AV / Input / RDS
	Shift + AV / Input / RDS
	Menu / Home
	Text / Goto
	Subtitle / EQ
	Picture / Format
	Info / Angle
	Exit / Cancel / Clear
	Shift + Red / Netflix /
	Smart / List
	Left
	Up
	Right
	Shift + Menu /
	OK

Original	Replacement
	Option
	Down
	Back/Return
	Red
	Green
	Yellow
	Blue
	Vol+
	Mute
	PR+
	Vol-
	PR-
	1
	2
	3
	4
	5

Replacement	Original
	Setup / OPT /
	Down
	Back / Return
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Vol+
	Mute / Dimmer
	CH+ / Page+
	Vol-
	CH- / Page-
	1
	2
	3
	4
	5





	Original	Replacement	Original	Replacement
	6			
	7			
	8			
	9			
	?/Help			
	0			
	Last View			
	<<			
	Play			
	>>			
	I<<			
	Pause			
	>>I			
	Stop			
	Rec	