



 





























 


Original	Replacement
 Power	 Power
 Sleep	 Sleep / Timer
 Open/Close	 Eject / Surround
 AUX	 Shift + 7
 1	 1
 2	 2
 3	 3
 Display	 Display / Media
 4	 4
 5	 5
 6	 6
 ≥10	 Guide / EPG / -/--
 7	 7
 8	 8
 9	 9
 0	 0
 Program CD	 TV/Radio /


Original	Replacement
 Cancel CD	 Exit / Cancel / Clear
 Repeat CD	 Green / APP / Repeat
 Random CD	 Shift + 4
 I<< CD	 I<< / Preset-
 >>I CD	 >>I / Preset+
 Stop CD	 Stop / Hold
 Play CD	 Play / Slow
 Pause CD	 Pause / Step / Freeze
 FM Mode/BP	 Shift + TV/Radio / Program
 Tuner/Band	 Shift + 6
 Rev Tape	 Shift + D.Menu / Top Menu
 FF Tape	 Shift + 5
 Stop Tape	 Shift + Stop /
 <> Tape	 Text / Goto
 Muting	 Mute / Dimmer
 Sound Virtualizer	 Sound / Title
 Counter Reset	 Setup / OPT /



Program

Tape

 Tools

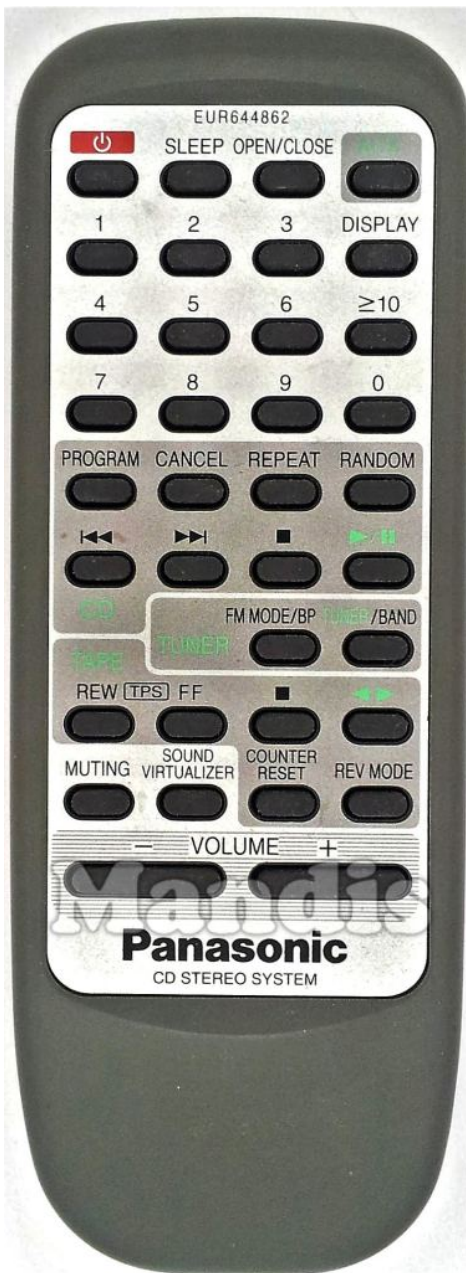

Original	Replacement	Original	Replacement
 Rev Mode Tape	 D.Menu / Top		
 Vol-	 Vol-		
 Vol+	 Vol+		

