

 
 




 
 


 
 
 

 

 

 
 


 


 
 
 

 
 
 
 


 
 
 
 
 
 


 
 
 
 


 







 












Original	Replacement	Original	Replacement
 Power	 Power	 Manual Skip	 D. Menu
 Drive Select	 Text	 >> Slow/Search	 >>
 1	 1	 << Slow/Search	 <<
 2	 2	 >>  Skip	 >>
 3	 3	  << Skip	  <<
 4	 4	 Stop	 Stop
 5	 5	 Pause	 Pause
 6	 6	 Play	 Play
 7	 7	 i/Status	 Info
 8	 8	 Exit	 Exit
 9	 9	 Option	 Options
 0	 0	 Return	 Back
 */Delete	 Guide	 Direct Navigator	 List
 Input Select	 AV	 Prog/Check	 Sleep
 CH+	 Ch +	 Function Menu	 Menu
 CH-	 Ch -	 Up	 Up
 Create Chapter	 Pre Ch	 Down	 Down





Original	Replacement	Original	Replacement
Right/II>	Right	Vol+ Tv	Vol +
Left/<II	Left	Vol- Tv	Vol -
OK	Ok	CH+ Tv	Shift + Ch +
Red	Red	CH- Tv	Shift + Ch -
Yellow	Yellow		
Rec	Rec		
Rec Mode	Shift + Rec		
Green	Green		
Blue	Blue		
Ext Link	Smart		
Audio	Dual		
Direct Tv Rec	TV/R		
STTL	Subt		
Display	Shift + Info		
Time Slip	3D		
Power Tv	Shift + Power		
Av Tv	Media		

