

 
 

 








 


 









 


 
 




 
 

 

 

 
 
 

 






 

 





| Original | Replacement |
|--|---|
|  Power |  Power |
|  Sleep |  Sleep |
|  AUX |  AV |
|  Open/Close |  Eject |
|  Dimmer |  Media |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  +10 |  Guide |
|  Program |  Shift + Sleep |

| Original | Replacement |
|---|--|
|  Play Mode |  Shift + Play |
|  I<< |  I<< |
|  >>I |  >>I |
|  Cancel |  Exit |
|  Stop |  Stop |
|  Pause |  Pause |
|  Play |  Play |
|  Sound Virtualizer |  Dual |
|  FM Mode |  Subt |
|  Tuner/Band |  TV/R |
|  Treble+ |  Ch + |
|  Treble- |  Ch - |
|  Bass+ |  Right |
|  Bass- |  Left |
|  Vol+ |  Vol + |
|  Vol- |  Vol - |
|  Muting |  Mute |

