



Original	Replacement
DVD/VHS Power	Power
TV Power	Shift + Power
TV CH +	Shift + CH+ /
TV Volume +	Vol+
Drive Select	Smart / List
TV AV	Shift + AV / Input / RDS
TV CH -	Shift + CH- /
TV Volume -	Vol-
1	1
2	2
3	3
CH + / Tracking/V-Lock +	CH+ / Page+
4	4
5	5
6	6
CH - / Tracking/V-Lock -	CH- / Page-
7	7

Original	Replacement
8	8
9	9
ShowView	Sound / Title
* / Reset	Guide / EPG / -/-
0	0
Input Select	AV / Input / RDS
Delete	Exit / Cancel / Clear
I<<	I<< / Preset-
>>I	>>I / Preset+
<<	<< / Tune-
>>	>> / Tune+
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Play	Play / Slow
Time Slip / << Jet Rew	Shift + << /
Manual Skip	Sleep / Timer
Prog Check	Setup / OPT /





Original	Replacement	Original	Replacement
 Direct Navigator	 D.Menu / Top		
 Left / <II	 Left		
 Enter	 OK		
 Up	 Up		
 Right / II>	 Right		
 Functions	 Menu / Home		
 Sub Menu	 Info / Angle		
 Down	 Down		
 Return	 Back / Return		
 Audio	 Audio / Lang I/II		
 Display	 Display / Media		
 Create Chapter	 TV/Radio /		
 Status	 Picture / Format		
 Rec	 Rec / Rec Mode		
 Rec Mode	 Shift + Rec / Rec Mode		
 Ext Link	 Text / Goto		
 Direct TV Rec	 Zoom / Size		

