



 

 






 
























 

 
Original	Replacement
Power	Power
Direct Tv Rec	Shift + Rec / Rec Mode
Tv Aspect/AV Link	Picture / Format
Tv/Text	Text / Goto
1	1
2	2
3	3
Tracking/V-Lock+	CH+ / Page+
4	4
5	5
6	6
Tracking/V-Lock-	CH- / Page-
7	7
8	8
9	9
Vol+	Vol+
AV/Input Select	AV / Input / RDS

Original	Replacement
0	0
-/--	Guide / EPG / -/--
Vol-	Vol-
Library/Search	Red / Netflix / Search
I<< Index	I<< / Preset-
Index >>I	>>I / Preset+
ShowView	Info / Angle
Still Album	Smart / List
Replay	Back / Return
Pause/Step	Pause / Step / Freeze
Rec	Rec / Rec Mode
Menu	Menu / Home
Up	Up
Play	Play / Slow
Exit	Exit / Cancel / Clear
Left	Left
<< / Tune-	<< / Tune-





Original	Replacement
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	

Original	Replacement
	
	
	
	





Original	Replacement
	Power
	Picture / Format
	Text / Goto
	1
	2
	3
	CH+ / Page+
	4
	5
	6
	CH- / Page-
	7
	8
	9
	Vol+
	AV / Input / RDS
	0

Original	Replacement
	Guide / EPG / -/--
	Vol-
	Up
	Red / Netflix / Search
	Green / APP / Repeat
	Right
	Yellow / YouTube / Repeat
	Shift + Vol+
	Blue / Prime Video / Random
	Shift + CH+ /
	Down
	Left
	Shift + Vol-
	Shift + CH- /

