


 
 
 

 

 

 
 

 
 












 


 
 
 

 
 
 
 
 
 
 


 
 







Original	Replacement	Original	Replacement
 POWER	 Power	 $\cong 10$ / -/--	 Guide
 TV	 TV/R	 Cancel	 Exit
 VCR / AUX	 Shift + TV/R	 CH +	 Ch +
 SLEEP	 Sleep	 CH -	 Ch -
 TV / AV	 AV	 VOL +	 Vol +
 TUNER / BAND	 Smart	 VOL -	 Vol -
 DVD / CD	 Media	 SKIP PREV.	 I<<
 1	 1	 SKIP NEXT	 >>I
 2	 2	 SLOW/SEARCH	 <<
 3	 3	 SLOW/SEARCH	 >>
 4	 4	 STOP	 Stop
 5	 5	 PAUSE	 Pause
 6	 6	 PLAY	 Play
 7	 7	 TOP MENU / DIR. NAV.	 D. Menu
 8	 8	 MENU / PLAY LIST	 Menu
 9	 9	 UP	 Up
 0	 0	 LEFT	 Left





Original	Replacement
Power	Power
Power AV	+ Shift + Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
≥ 10 / -/--	GUIDE
SKIP >>I	>>I
SKIP I<<<	I<<<
SLOW/SEARCH <<<	<<<
SEARCH >>>	>>>

Original	Replacement
Pause	Pause
Play	Play
Stop	Stop

